



MODA

Installation Instruction

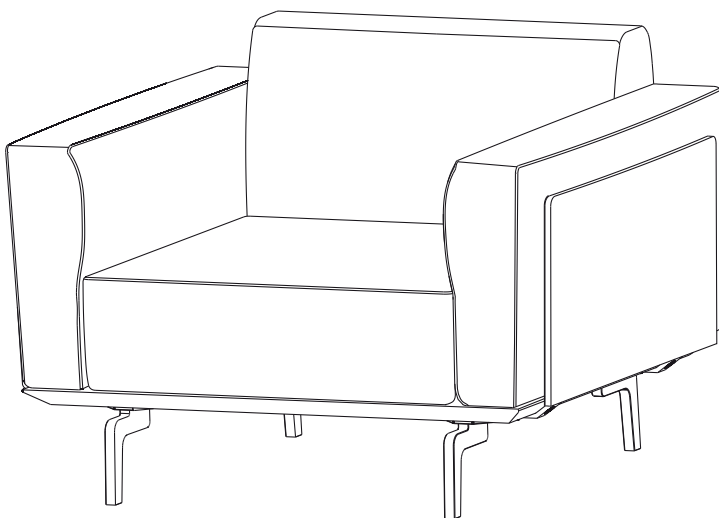


CAMERICH


M8X20mm










M8X20mm







M8




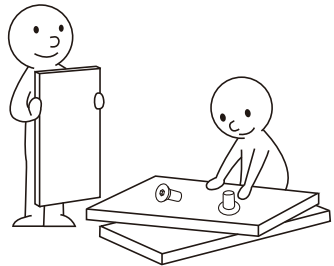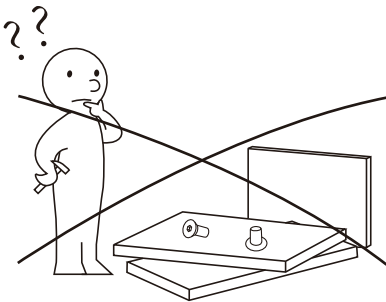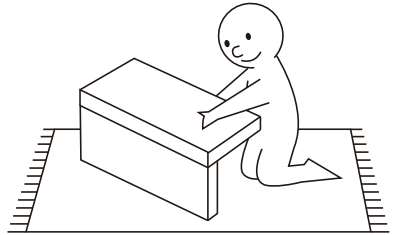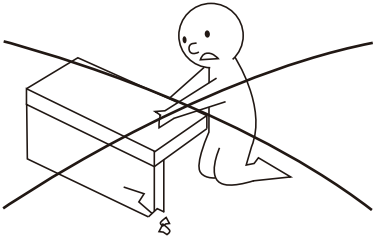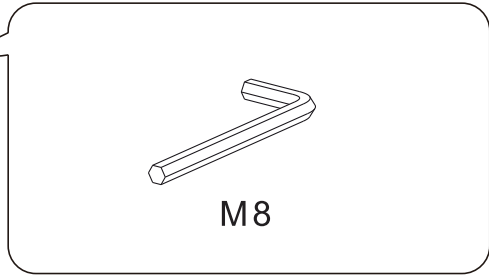

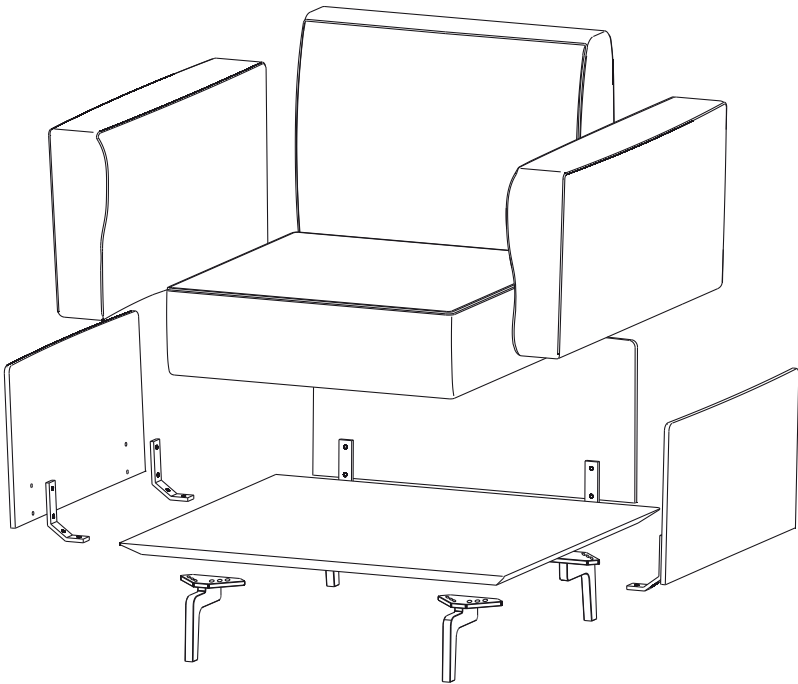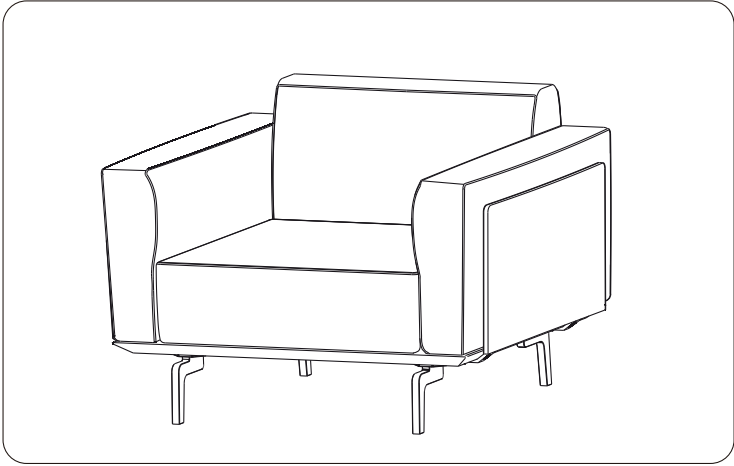


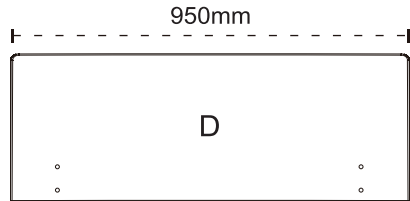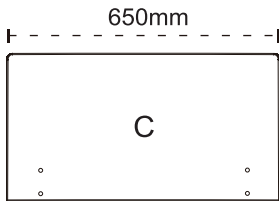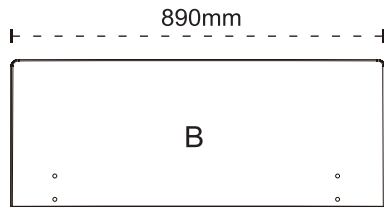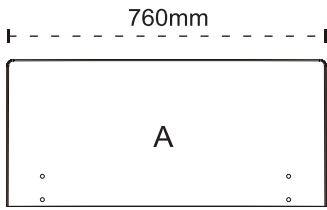


C01G0201.

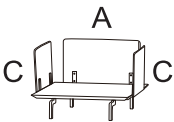


C01G0203.

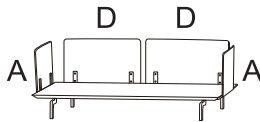


C01G0204.

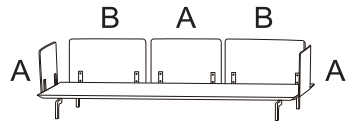


C01G0205.

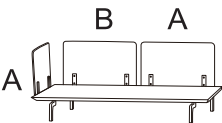


C01G0206.

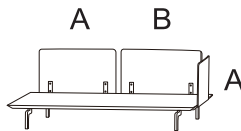


C01G0207.

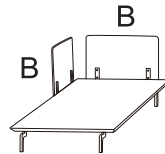


C01G0208.

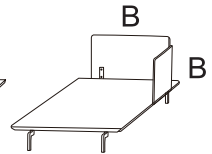




C01G0209.

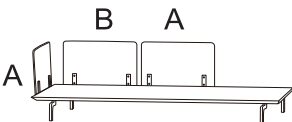


C01G0210.

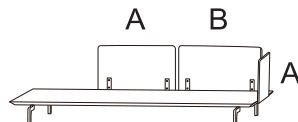

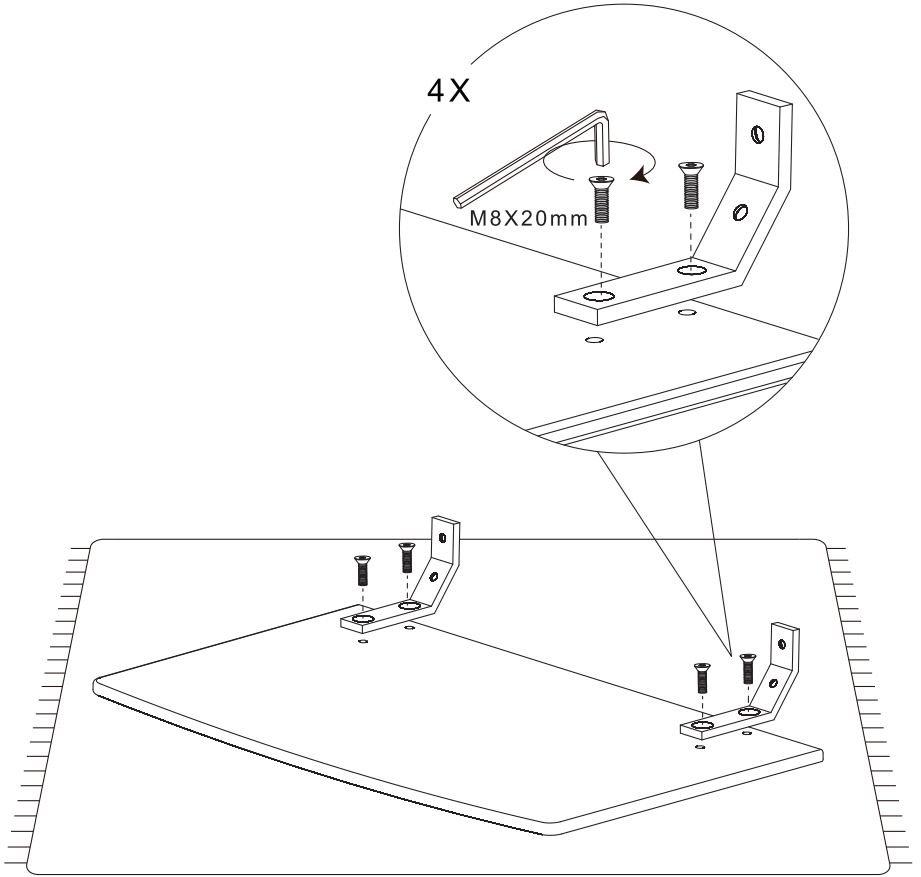


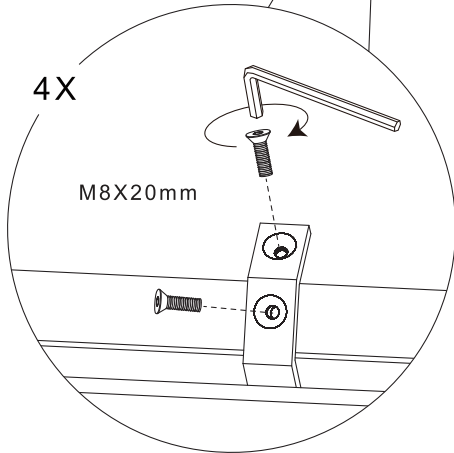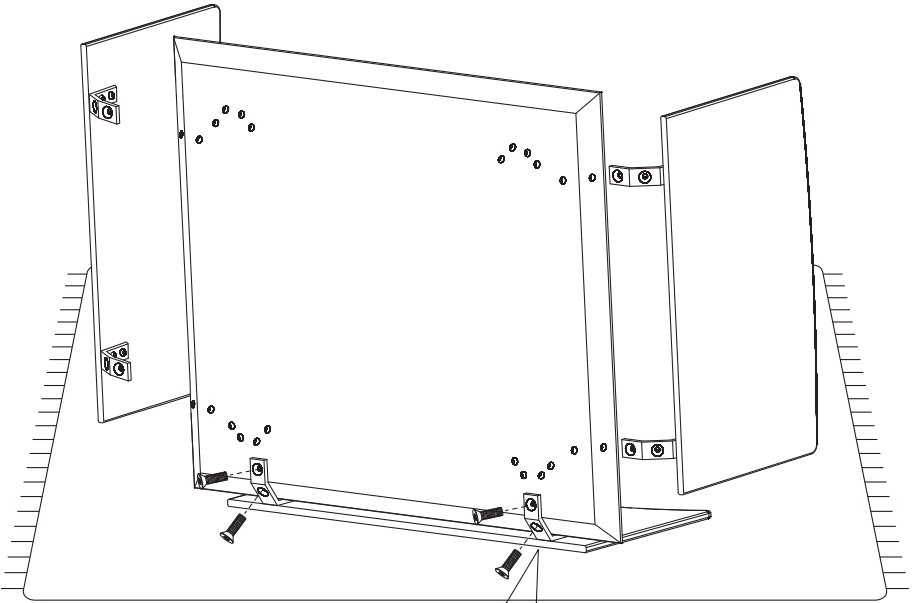



16X

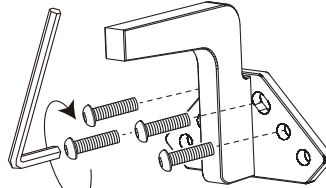

M8X20mm

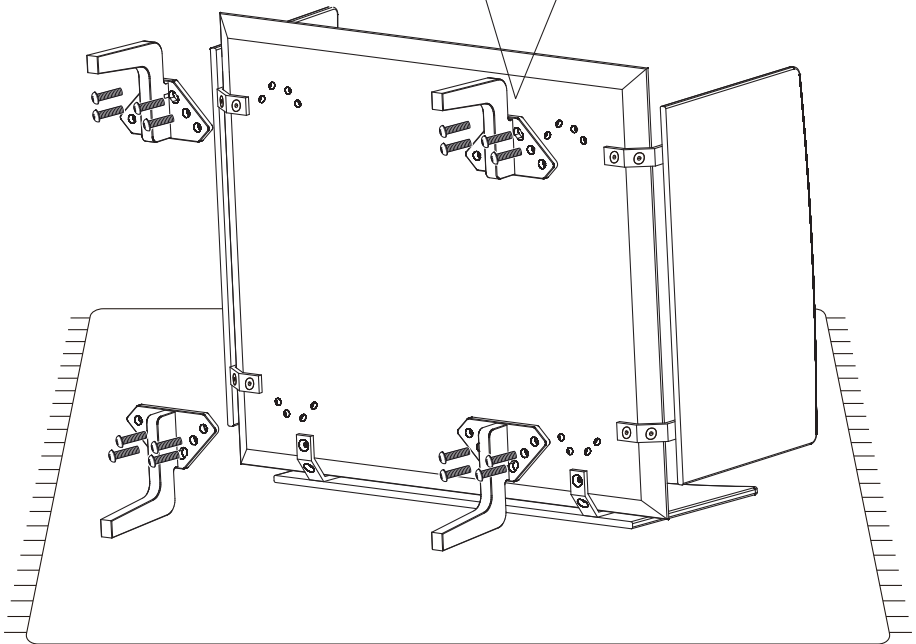

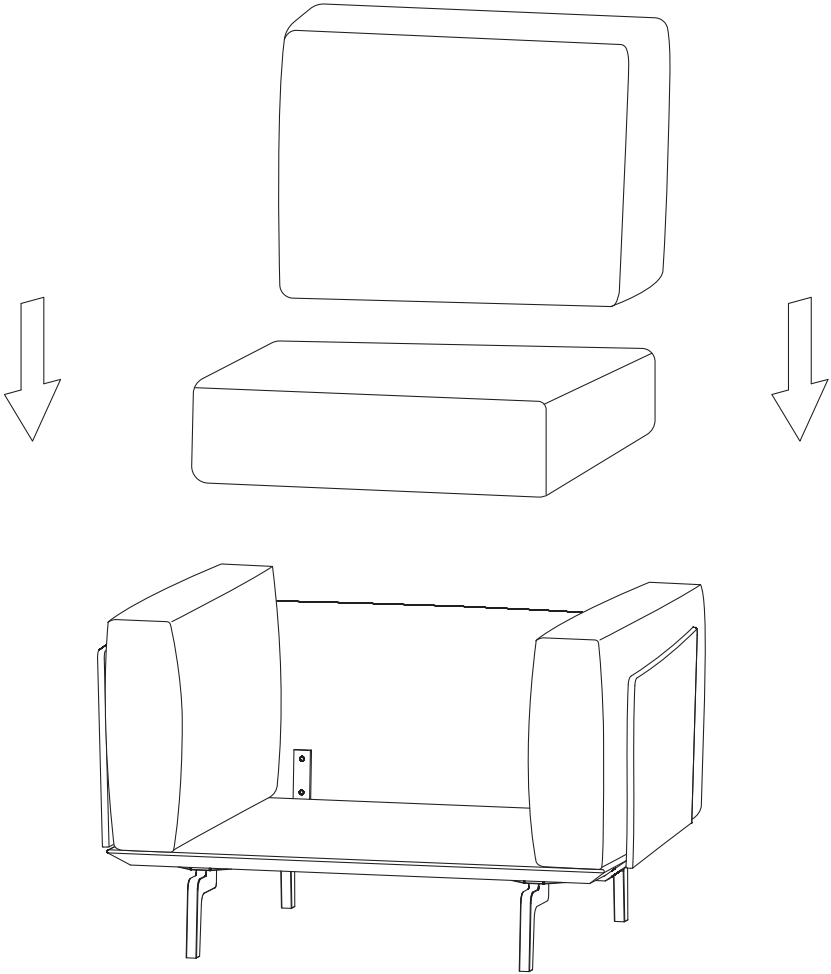

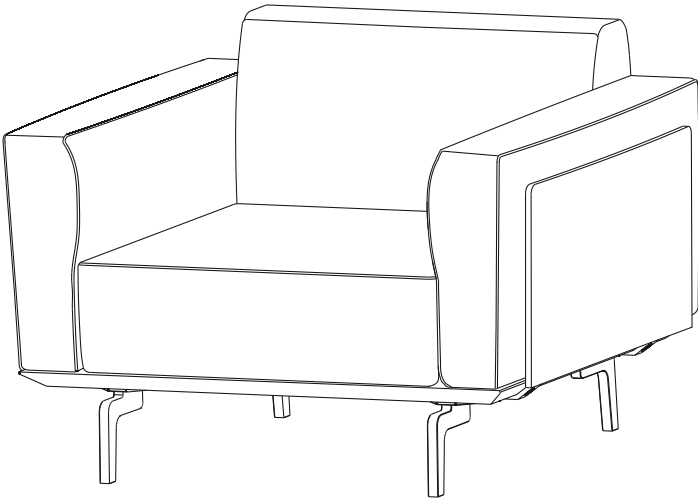



CAMERICHfurniture



camerich_official